

Resco Nail Trimmer

Blade Replacement Procedure

Step #1


- Hold trimmer as shown
- Squeeze handles together until small hole appears in the cutting blade

Small hole in
cutting blade



Step #2

- Insert small pin (comes with blade replacement kit) or use any small pin that fits in the small hole

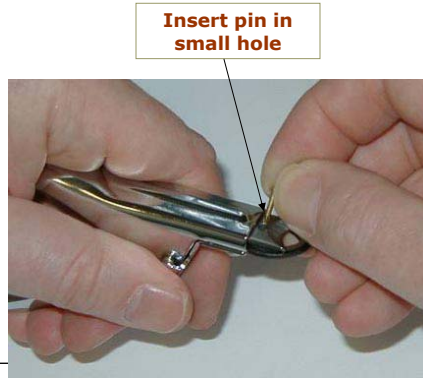

Step #3

- With the pin in the hole, release the handles
- The cutting blade will retract until the pin stops it



Step #4

- Place your thumb or finger on the ejector tab that is in between the handles

Ejector tab



Step #5

- Push upward with your finger and you will feel the cutting blade release



Step #6

- Now squeeze the handles and you will see the cutting blade advance
- It is now disengaged



Step #7

- Remove the pin then squeeze the handles to fully extend the cutting blade



Step #8

- Remove the old cutting blade



Step #9

- For longer wear and better operation, put a drop of 3-in-1 or any light machine oil on the new cutting blade before installing
- Insert new cutting blade as shown



Step #10

- Slide the new cutting blade in until it stops



Step #11

- At this point, put your finger on the ejector tab and push up while at the same time pushing the cutting blade slightly further into the channel




Step #11

- Release the ejector tab and squeeze the handles – the new cutting blade should engage and move in and out freely




Trouble Shooting

- If, after installing the new blade, you squeeze the handles and they do not move—you have the cutting blade too far in the channel

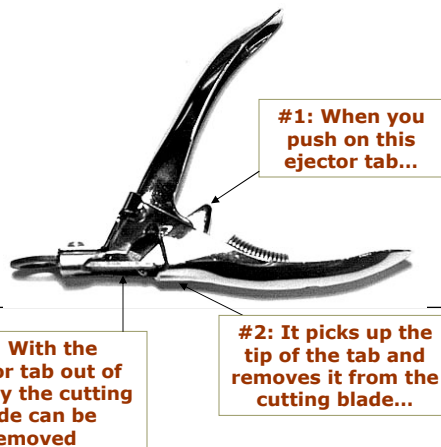


Trouble Shooting

- Tap the tip of the trimmer on a cutting board or surface that will not mar until the cutting blade drops out

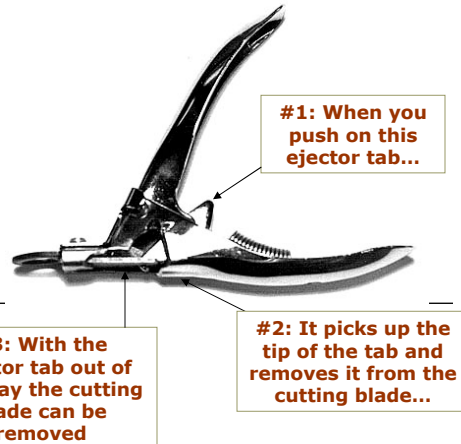


Trouble Shooting

- Re-install using step #11 but remember to only slightly move the cutting blade in as you release the ejector tab

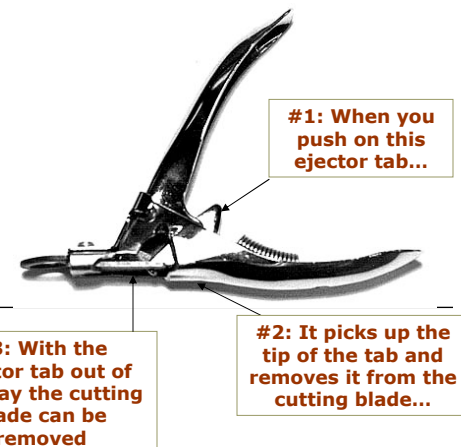

Trouble Shooting

- If, when you squeeze the handles, the cutting blade is pushed back out without engaging then you did not push the blade in far enough before you released the ejector tab

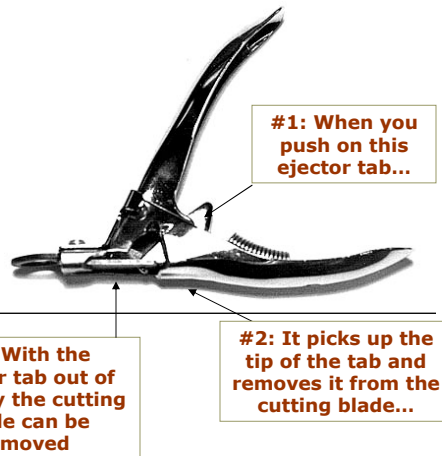

Trouble Shooting

- Re-install the blade following step #11

